



MU-0030-004-LP2 Rev. A 2015-02-03

Printed in Spain

mc-PAD




MICROSON S.A.
Pere IV, 160
08005 BARCELONA. SPAIN
Tel. +34 93 300 58 00
www.microson.es






REF 93502



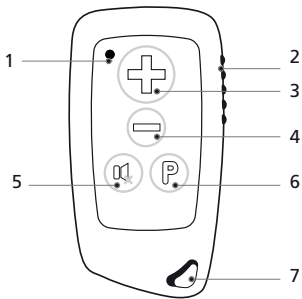

1. LED indicador de estado
LED status indicator
Indicatore di stato LED
LED indicador de estado
2. Interruptor (Bloqueo/Desbloqueo)
Switch (lock/unlock)
Interruttore (blocco/sblocco)
Interruptor (Bloqueio/Desbloqueio)

   3. Botón incremento de volumen
Volume up button
Pulsante aumento volume
Botão aumento de volume
4. Botón disminución de volumen
Volume down button
Pulsante riduzione volume
Botão aumento de volume
5. Botón Mute (silencio)
Mute button (silence)
Pulsante Mute (silenzio)
Botão Mute (silêncio)
6. Botón selección de programa
Select program button
Pulsante di selezione della memoria
Botão seleção de memória
7. Ranura
Eyelet
Fessura
Ranhura



- P-1 ♪
- P-2 ♪♪
- P-3 ♪♪♪
- P-4 ♪♪♪♪
- P-5 ♪♪♪♪♪
- P-6 ♪♪♪♪♪♪

